



## ***Meat Grinders***

***Models MG-IT-0012-C, 0022-C, 0032-C  
Items 11051, 11053, 39714  
Instruction Manual***



**STOP**


**DO NOT RETURN  
THIS PRODUCT TO THE STORE**

For questions or assistance with this  
product call OMCAN Toll Free:  
1 800 465 0234  
Customer Service  
or  
visit the Support section of  
[www.omcan.com](http://www.omcan.com)

*Revised - 09/29/2021*



Toll Free: 1-800-465-0234  
Fax: 905-607-0234  
Email: [service@omcan.com](mailto:service@omcan.com)  
[www.omcan.com](http://www.omcan.com)

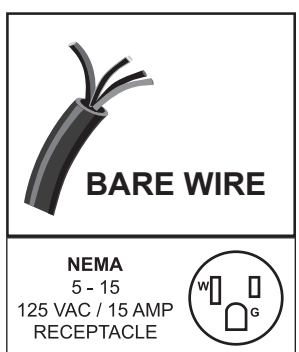

# ***Table of Contents***

Model MG-IT-0012-C / Model MG-IT-0022-C / Model MG-IT-0032-C

---

| <b>Section</b>                   | <b>Page</b> |
|----------------------------------|-------------|
| General Information -----        | 3 - 4       |
| Safety and Warranty -----        | 4 - 5       |
| Technical Specifications -----   | 6           |
| Installation and Operation ----- | 6 - 8       |
| Maintenance -----                | 8 - 9       |
| Troubleshooting -----            | 9 - 10      |
| Parts Breakdown -----            | 11 - 16     |
| Electrical Schematics -----      | 17 - 18     |
| Warranty Registration -----      | 19          |



## ***General Information***

---

**Omcan Manufacturing and Distributing Company Inc., Food Machinery of America, Inc. dba Omcan and Omcan Inc. are not responsible for any harm or injury caused due to any person's improper or negligent use of this equipment. The product shall only be operated by someone over the age of 18, of sound mind, and not under the influence of any drugs or alcohol, who has been trained in the correct operation of this machine, and is wearing authorized, proper safety clothing. Any modification to the machine voids any warranty, and may cause harm to individuals using the machine or in the vicinity of the machine while in operation.**

### **CHECK PACKAGE UPON ARRIVAL**

Upon receipt of an Omcan shipment please inspect for external damage. If no damage is evident on the external packaging, open carton to ensure all ordered items are within the box, and there is no concealed damage to the machine. If the package has suffered rough handling, bumps or damage (visible or concealed), please note it on the bill of lading before accepting the delivery and contact Omcan within 24 hours, so we may initiate a claim with the carrier. A detailed report on the extent of the damage caused to the machine must be filled out within three days, from the delivery date shown in the shipping documents. Omcan has no recourse for damaged products that were shipped collect or third party.

**Before operating any equipment, always read and familiarize yourself with all operation and safety instructions.**

**Omcan would like to thank you for purchasing this machine. It's of the utmost importance to save these instructions for future reference. Also save the original box and packaging for shipping the equipment if servicing or returning of the machine is required.**

---

**Omcan Fabrication et distribution Compagnie Limitée et Food Machinery d'Amérique, dba Omcan et Omcan Inc. ne sont pas responsables de tout dommage ou blessure causé du fait que toute personne ait utilisé cet équipement de façon irrégulière. Le produit ne doit être exploité que par quelqu'un de plus de 18 ans, sain d'esprit, et pas sous l'influence d'une drogue ou d'alcool, qui a été formé pour utiliser cette machine correctement, et est vêtu de vêtements de sécurité appropriés. Toute modification de la machine annule toute garantie, et peut causer un préjudice à des personnes utilisant la machine ou des personnes à proximité de la machine pendant son fonctionnement.**

### **VÉRIFIEZ LE COLIS DÈS RÉCEPTION**

Dès réception d'une expédition d'Omcan veuillez inspecter pour dommages externes. Si aucun dommage n'est visible sur l'emballage externe, ouvrez le carton afin de s'assurer que tous les éléments commandés sont dans la boîte, et il n'y a aucun dommage dissimulé à la machine. Si le colis n'a subi aucune mauvaises manipulations, de bosses ou de dommages (visible ou cachée), notez-le sur le bon de livraison avant d'accepter la livraison et contactez Omcan dans les 24 heures qui suivent, pour que nous puissions engager une réclamation auprès du transporteur. Un rapport détaillé sur l'étendue des dommages causés à la machine doit être rempli dans un délai de trois jours, à compter de la date de livraison indiquée dans les documents d'expédition. Omcan n'a aucun droit de recours pour les produits endommagés qui ont été expédiés ou cueilli par un tiers transporteur.

# ***General Information***

---

**Avant d'utiliser n'importe quel équipement, toujours lire et vous familiariser avec toutes les opérations et les consignes de sécurité.**

**Omcan voudrais vous remercier d'avoir choisi cette machine. Il est primordial de conserver ces instructions pour une référence ultérieure. Également conservez la boîte originale et l'emballage pour l'expédition de l'équipement si l'entretien ou le retour de la machine est nécessaire.**

---

**Omcan Empresa De Fabricacion Y Distribucion Inc. Y Maquinaria De Alimentos De America, Inc. dba Omcan y Omcan Inc. no son responsables de ningun daño o perjuicio causado por cualquier persona inadecuada o el uso descuidado de este equipo. El producto solo podra ser operado por una persona mayor de 18 años, en su sano juicio y no bajo alguna influencia de droga o alcohol, y que este ha sido entrenado en el correcto funcionamiento de esta máquina, y ésta usando ropa apropiada y autorizada. Cualquier modificación a la máquina anula la garantía y puede causar daños a las personas usando la máquina mientras esta en el funcionamiento.**

## **REVISE EL PAQUETE A SU LLEGADA**

**Tras la recepcion de un envio Omcan favor inspeccionar daños externos. Si no hay daños evidentes en el empaque exterior, Habra el carton para asegurarse que todos los articulos solicitados estén dentro de la caja y no encuentre daños ocultos en la máquina. Si el paquete ha sufrido un manejo de poco cuidado, golpes o daños (visible o oculto) por favor anote en la factura antes de aceptar la entrega y contacte Omcan dentro de las 24 horas, de modo que podamos iniciar una reclamación con la compañía. Un informe detallado sobre los daños causados a la máquina debe ser llenado en el plazo de tres días, desde la fecha de entrega que se muestra en los documentos de envío. Omcan no tiene ningun recurso por productos dañados que se enviaron a recoger por terceros.**

**Antes de utilizar cualquier equipo, siempre lea y familiarizarse con todas las instrucciones de funcionamiento y seguridad.**

**Omcan le gustaría darle las gracias por la compra de esta máquina. Es de la mayor importancia para salvar estas instrucciones para futuras consultas. Además, guarda la caja original y el embalaje para el envío del equipo si servicio técnico o devolución de la máquina que se requiere.**

# ***Safety and Warranty***

---

## **WARNINGS ON THE RESIDUAL RISKS**

**RESIDUAL RISK DUE TO THE FIXED PROTECTIONS REMOVAL OR INTERRUPTION ON BROKEN/ WORN PARTS.**

**The operator must not try to open or remove a fixed protection or tamper with a safety device.**

# ***Safety and Warranty***

---

During operation, maintenance and cleaning, keep hands or other body parts away from the machines dangerous areas, a residual risk remains due to:

1. Knocks with the machines manufacturing parts.
2. Grazing and/or abrasion with the machines rough parts.
3. Cuts with the sharp parts.

## **PROTECTION DEVICES ON THE MACHINE**

The machine protections and safety devices must not be removed, never operate without attaching the hopper.

The machines transmission parts are completely isolated by means of fixed protections which does not allow access. The moving elements are not isolated from fixed protections, moving protections or other safety devices. The grinding group parts are placed away from access points so they are not reachable.

## **DISCLAIMER**

|                                                                                                                   |
|-------------------------------------------------------------------------------------------------------------------|
| PLEASE RUN THE UNIT WITH A LIGHT, DISPOSABLE LOAD TO REMOVE ANY METAL SHAVINGS FROM THE MACHINE BEFORE FIRST USE! |
|-------------------------------------------------------------------------------------------------------------------|

**RESIDENTIAL USERS:** Vendor assumes no liability for parts or labor coverage for component failure or other damages resulting from installation in non-commercial or residential applications. The right is reserved to deny shipment for residential usage; if this occurs, you will be notified as soon as possible.

## **1 YEAR PARTS AND LABOUR BENCH WARRANTY**

Within the warranty period, contact Omcan Inc. at 1-800-465-0234 to schedule a drop off to either an Omcan authorized service depot in the area, or to an Omcan Service warehouse to repair the equipment.

Unauthorized maintenance will void the warranty. Warranty covers electrical and part failures, not improper use.

Please see <https://omcan.com/disclaimer> for complete info.

## **WARNING:**

The packaging components are classified as normal solid urban waste and can therefore be disposed of without difficulty.

In any case, for suitable recycling, we suggest disposing of the products separately (differentiated waste) according to the current norms.

**DO NOT DISCARD ANY PACKAGING MATERIALS IN THE ENVIRONMENT!**

# Technical Specifications

| Model                    | MG-IT-0012-C                              | MG-IT-0022-C                             | MG-IT-0032-C                               |
|--------------------------|-------------------------------------------|------------------------------------------|--------------------------------------------|
| Power                    | 1 HP / 0.75 kW                            | 1.5 HP / 1.12 kW                         | 3 HP / 2.2 kW                              |
| Throat Opening (approx.) | 2" / 51mm                                 |                                          | 2.75" / 70mm                               |
| Electrical               | 110V / 60Hz / 1                           |                                          | 220V / 60Hz / 1                            |
| Weight                   | 42 lbs. / 19 kgs.                         | 50 lbs. / 22.7 kgs.                      | 114 lbs. / 52 kgs.                         |
| Packaging Weight         | 43 lbs. / 19.6 kgs.                       | 54.5 lbs. / 24.8 kgs.                    | 121 lbs. / 55 kgs.                         |
| Dimensions               | 16.3" x 8" x 17.5"<br>413 x 203 x 445mm   | 17" x 9" x 20"<br>432 x 229 x 508mm      | 22.5" x 11.8" x 22"<br>572 x 300 x 560mm   |
| Packaging Dimensions     | 17.5" x 9.5" x 17.5"<br>445 x 241 x 445mm | 19.5" x 12" x 20.5"<br>495 x 305 x 521mm | 24.4" x 16.9" x 25.6"<br>620 x 430 x 650mm |
| Item Number              | 11051                                     | 11053                                    | 39714                                      |

## Installation and Operation

### TRANSPORTATION, HANDLING AND STORAGE

All transportation and handling operations must be performed from trained personnel and must have read and understood the safety precautions mentioned in this manual.

1. Perform the machine handling and transportation only when unplugged.
2. Verify that the lifting means are able to support the loading weight and overall dimensions in safe conditions.
3. Avoid dropping or shaking the unit during transportation.

### PREPARATION PRELIMINARY OPERATIONS

#### STABILITY

The machines stability is designed so that it can be used without the risk of falling or unwanted movement.

#### ELECTRICAL SUPPLY

The electrical supply connection must be in conformance with the country legislation in which it is being used.

1. The electrical supply must match the required specifications indicated on the rating plate. If excessive voltages are applied, some components will be damaged beyond repair.
2. The device must be grounded in conformance to the local standards.
3. The electrical supply cable outside the machine cover must be adequately protected.


# Installation and Operation

## GRINDING GROUP ASSEMBLY / DISASSEMBLY

The assembly / disassembly operations of any machine part are performed with the machine in the OFF position, and the plug disconnected from the socket.

To assemble the grinder, do the following steps in this order:

1. Insert into the shaft (1) in order: the worm (2), the cutting knife oriented as shown in the figure (3), and the plate (4).
2. Screw down and tighten the screw (5).

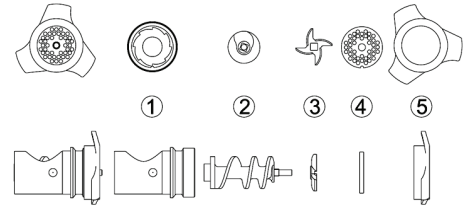

To disassemble, do the above in reverse order.

## FUNCTIONING DESCRIPTION

### STARTING THE MACHINE

To start the machine, the switch has to be placed on the “I” position.

### STOPPING THE MACHINE

To stop the machine, the switch has to be placed on the “O” position.

### FUNCTIONING SAFETY

If the machine is under stress, operated for a long period of time or overloaded, stop immediately for the thermal protection functioning. In this case wait for the unit to cool completely before using again.

## OPERATION

The machine operator can begin operation of the machine when:

1. The machine is installed properly.
2. The machine is connected to the electrical supply.
3. The hopper is inserted in the correct position.
4. The grinding group assembly is installed correctly.
5. The worm rotates in the correct direction.
6. Tests the switch.
7. Checks that all safety conditions are being met.
8. Checks that the plug is in the correct socket.
9. Place a collecting tray below the shaft to collect the final product.
10. Start the machine by placing the switch to the “I” position.
11. Manually introduce the chopped meat into the machine neck and use the supplied stomper to push the meat into the shaft.
12. Once the operation is completed, or when the product no longer comes out of the plate, place the switch to the “O” position to stop the machine.

It is recommended to only operate the machine when there is product in the unit.

# ***Installation and Operation***

---

## **AFTER EACH USE**

Once the machine has been operated and is no longer needed for use, please do the following:

1. Before turning off the unit, wait until the food product has finished going through the plate.
2. Turn off the machine by placing the switch to the "O" position.
3. Unplug the unit from the electrical socket.
4. Perform the cleaning and maintenance steps detailed in the "Maintenance" section.

## **UNBLOCK IN CASE OF OBSTRUCTION**

During operation, or during the worm rotation, due to the food products being introduced with incompatible parts (ie: bones), the machine could become blocked and cause a malfunction.

To be able to resume normal operation, the grinding group must be disassembled, and the blockage must be removed.

# ***Maintenance***

---

## **PROTECTIVE SAFETY DEVICES**

For any procedures described in this section, it is necessary to remove some of the fixed protections from their positions. The removal can only be performed by an authorized Omcan technician. At the end of the maintenance procedures, these protections must be replaced and fastened in their original positions.

**The machine must be switched off and unplugged prior to any maintenance and cleaning.**

## **EXTRAORDINARY MAINTENANCE**

In the event of any extraordinary maintenance, it can only be completed by an authorized Omcan service technician.

## **CLEANING**

All cleaning procedures must be started only when the machine is no longer in operation and is unplugged from the electrical socket.

The machine, the electrical equipment and electrical components must never be submerged, sprayed, or washed with water. Use a dry cloth to wipe these components.

## Maintenance

Follow the steps as listed:

| FREQUENCY                                     | PERSONNEL | CATEGORY                   | SOLUTIONS                                                                                                                                                                                           |
|-----------------------------------------------|-----------|----------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| At the end of every use and before daily use. | Operator  | DISINFECTION               | Use PH neutral detergents.                                                                                                                                                                          |
|                                               |           |                            | Use demineralized water if temperatures exceed 60°C/140°F.                                                                                                                                          |
|                                               |           |                            | If any other products are used, they must be adequate to the materials being disinfected.                                                                                                           |
|                                               |           | PERIODS OF LONG INACTIVITY | If the machine has been inactive for a long period of time, vigorously wipe the machine with a cloth soaked in Vaseline to create a protective barrier.                                             |
|                                               |           | PRODUCTS NOT TO USE        | Compressed or pressurized air jets.                                                                                                                                                                 |
|                                               |           |                            | Vapor equipment.                                                                                                                                                                                    |
|                                               |           |                            | Detergent that contains any of the following compounds:<br>- Bleach.<br>- Hydrochloric acid.<br>- Products that are used to clear drains.<br>- Caustic soda products for cleaning marble.<br>- Etc. |
|                                               |           |                            | Steel wool, brushes or abrasive discs produced with other metals or alloys, or tools that have previously cleaned other metals or alloys.                                                           |
|                                               |           |                            | Detergents in abrasive dust.                                                                                                                                                                        |
|                                               |           |                            | Fuel, solvents or inflammable and/or corrosive fluids.                                                                                                                                              |
|                                               |           |                            | Substances used to clean silver.                                                                                                                                                                    |

## Troubleshooting

The following indicated problems that may occur:

| TYPE                                   | POTENTIAL CAUSES  | SOLUTIONS                                                           |
|----------------------------------------|-------------------|---------------------------------------------------------------------|
| The electrical supply is not adequate. | General blackout. | Contact an electrician.                                             |
|                                        | Blown fuse.       | Replace the fuse, if the problem continues, contact an electrician. |



# Troubleshooting

---

|                                                         |                                          |                                                                                                                                      |
|---------------------------------------------------------|------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------|
| The machine stops.                                      | The protection device stops the machine. | Contact an electrician to eliminate the causes, once the cause has been determined, restore the machine to the recommended function. |
|                                                         | The cause could not be identified.       | Contact Omcan directly.                                                                                                              |
| The machine doesn't function: the worm will not rotate. | The electrical supply is not adequate.   | Check and restore the electrical supply.                                                                                             |
|                                                         | The switch is on the "O" position.       | Place the switch to the "I" position.                                                                                                |
|                                                         | Blown fuse.                              | Replace the fuse.                                                                                                                    |
|                                                         | The unit is overheated.                  | Wait for the unit to cool completely before starting.                                                                                |

# Parts Breakdown

**Model MG-IT-0012-C** 11051

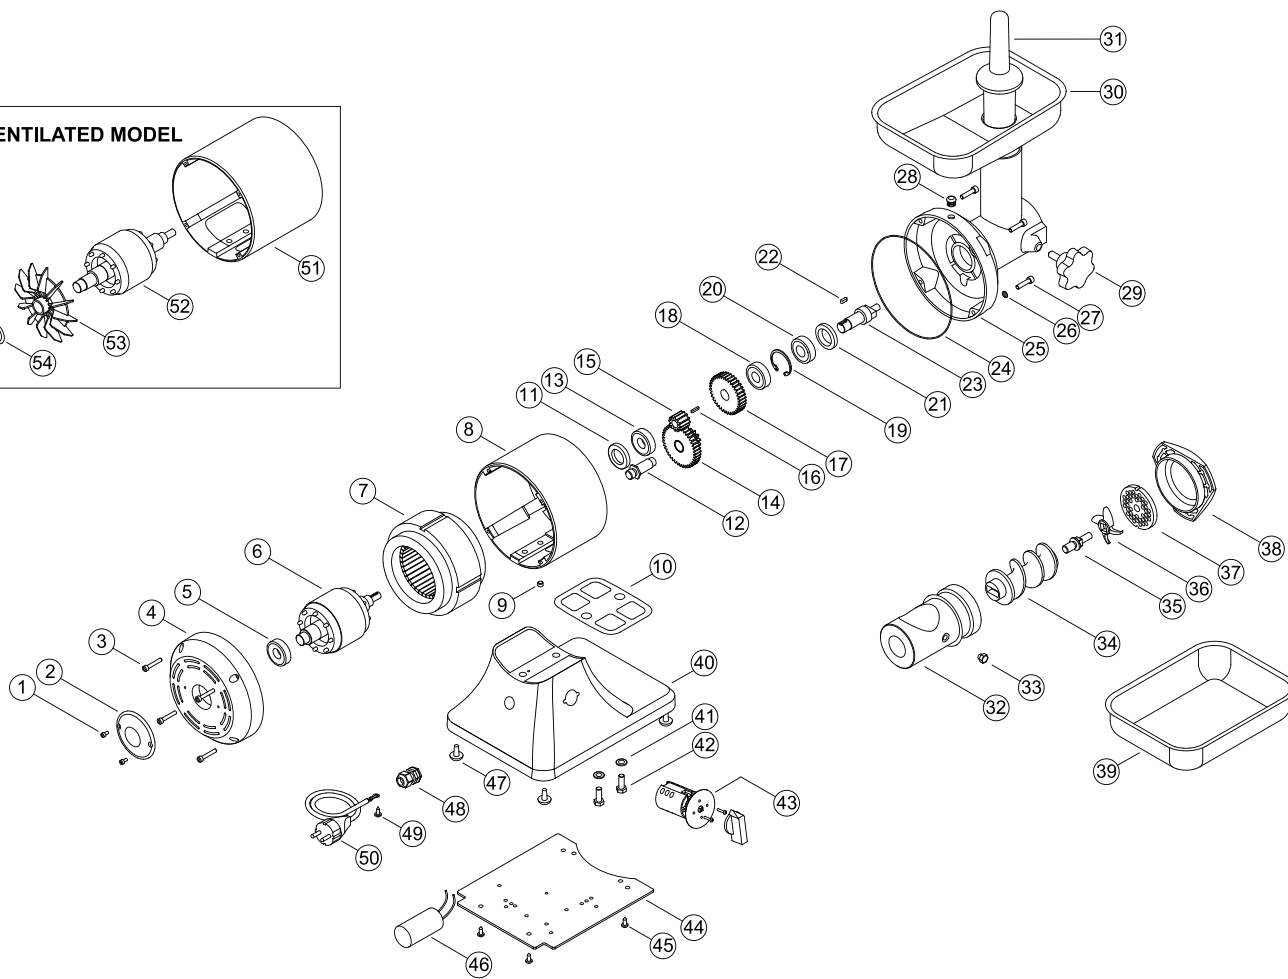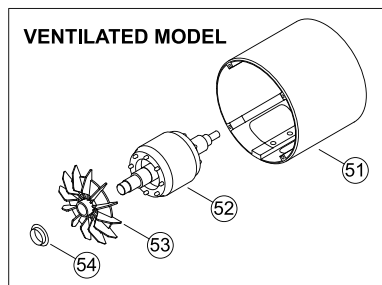


# Parts Breakdown

## Model MG-IT-0012-C 11051

| Item No. | Description                               | Position | Item No. | Description                             | Position | Item No. | Description                                          | Position |
|----------|-------------------------------------------|----------|----------|-----------------------------------------|----------|----------|------------------------------------------------------|----------|
| 15351    | Screw 4x8 for 11051                       | 1        | 15394    | Seeger of 40 for 11051                  | 19       | 15362    | Pan for 11051                                        | 39       |
| 15352    | Disc Locking ABS DA 80mm for 11051        | 2        | 15389    | Bearing 6203 2RS for 11051              | 20       | 15408    | Base for 11051                                       | 40       |
| 68910    | Aluminum Closing Disc 80mm for 11051      | 2        | 15387    | Oil Seal 40x25x7 for 11051              | 21       | 70181    | Washer 8x16x1.5 (4 pcs.) for 11051                   | 41       |
| 15353    | Screw 5x30 for 11051                      | 3        | 46421    | Key 4x4x12mm for Big Gear for 11051     | 22       | 15410    | Screw 8x22 for 11051                                 | 42       |
| 15380    | Back Motor Cover for 11051                | 4        | 15395    | Transmission Pin for 11051              | 23       | 17701    | Switch for 11051                                     | 43       |
| 15381    | Bearing 6203 ZZ for 11051                 | 5        | 15458    | Ring 164 5x2 - Oil Seal for 11051       | 24       | 19378    | Bipolar Switch for 11051                             | 43       |
| AI207    | Shaft with Rotor V.230 / 50 Hz. for 11051 | 6        | 15396    | Jacket Holder for 11051                 | 25       | 15411    | Rubber Base Cover for 11051                          | 44       |
| 15468    | Stator 110V/60Hz for 11051                | 7        | 15459    | Washer for 11051                        | 26       | 15412    | Screw 4 8x12 for 11051                               | 45       |
| AI208    | Short Banded Motor Housing for 11051      | 8        | 15397    | Screw 6x25 for 11051                    | 27       | 15413    | Capacitor for 11051                                  | 46       |
| AD423    | Wheat 8x6 for 11051                       | 9        | 15398    | Plug for Oil Opening (Rubber) for 11051 | 28       | 42904    | Rubber Foot for 11051                                | 47       |
| 15460    | Base Guard for 11051                      | 10       | 15401    | Knob for 11051                          | 29       | 15407    | Grand PG11 for 11051                                 | 48       |
| 15387    | Oil Seal 40x25x7 for 11051                | 11       | 15399    | Hopper for 11051                        | 30       | 15351    | Screw 4x8 for 11051                                  | 49       |
| 15447    | Gear Pin for 11051                        | 12       | 15400    | Plunger for 11051                       | 31       | 70168    | Cable with Plug Mod.Schuko V.230 for 11051           | 50       |
| 15389    | Bearing 6203 2RS for 11051                | 13       | 79600    | Steel Grinding Head for 11051           | 32       | AI209    | Long Banded Motor Housing for 11051                  | 51       |
| 15392    | Double Gear for 11051                     | 14       | 15402    | Grub Screw for 11051                    | 33       | AI210    | Shaft with Rotor V.230 / 50 Hz. Ventilated for 11051 | 52       |
| 15390    | Propeller Gear for 11051                  | 15       | 49488    | Stainless Steel Worm and Pin for 11051  | 34       | 15415    | Fan for 11051                                        | 53       |
| 15391    | Key 3x3x15mm for 11051                    | 16       | 17235    | Worm Pin Stainless Steel for 11051      | 35       | 15414    | Ring for 11051                                       | 54       |
| 15393    | Gear for 11051                            | 17       | 15406    | Aluminum Ring for 11051                 | 38       |          |                                                      |          |
| 15381    | Bearing 6203 ZZ for 11051                 | 18       | 60325    | Stainless Steel Ring for 11051          | 38       |          |                                                      |          |

# Parts Breakdown

**Model MG-IT-0022-C** 11053

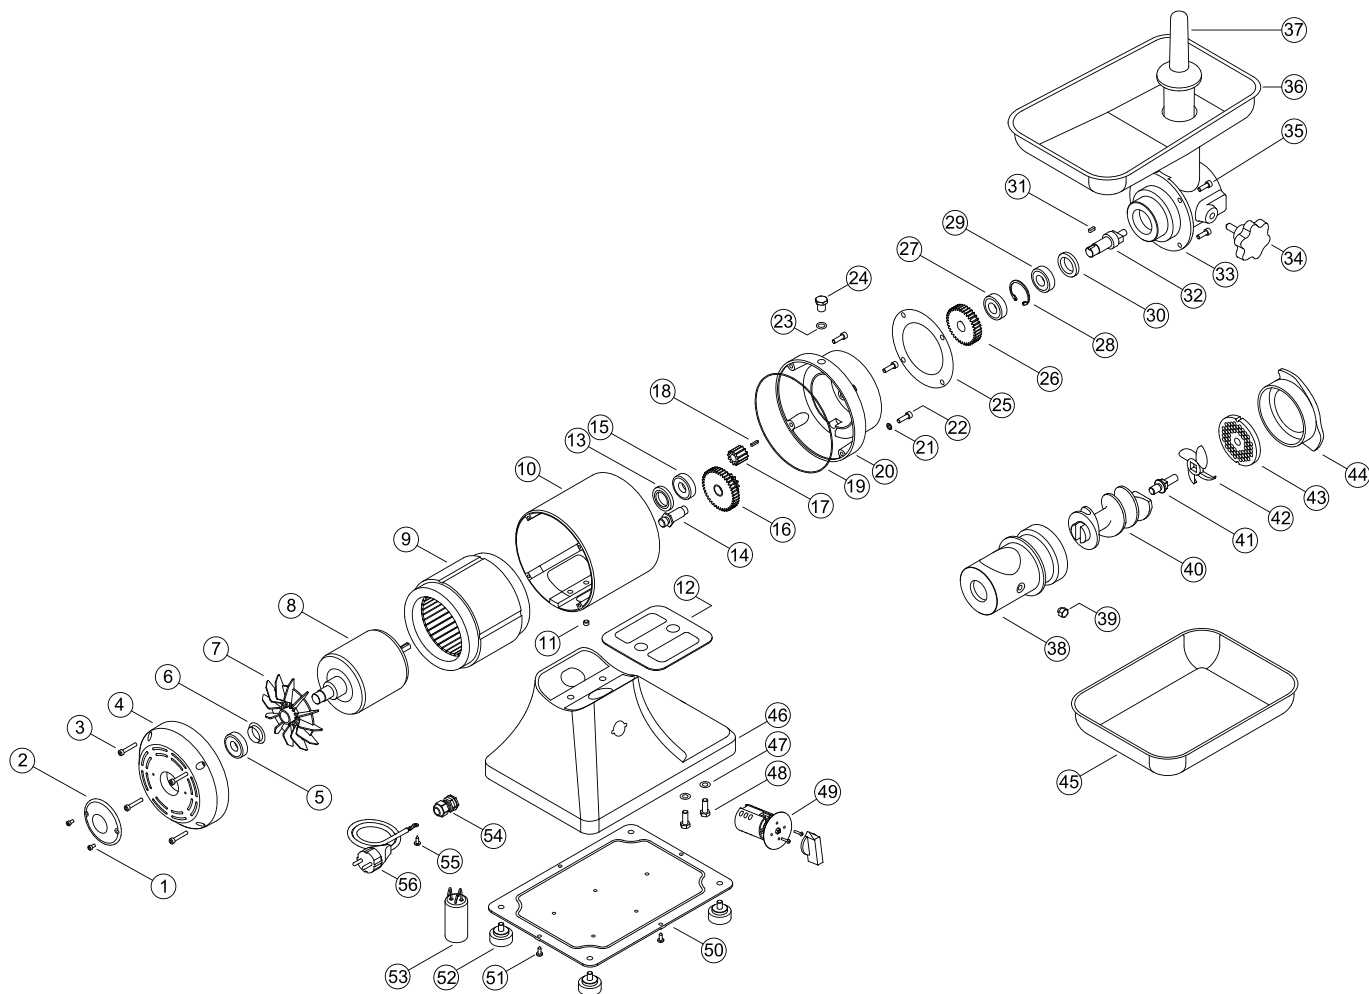


# Parts Breakdown

## Model MG-IT-0022-C 11053

| Item No. | Description                               | Position | Item No. | Description                         | Position | Item No. | Description                                             | Position |
|----------|-------------------------------------------|----------|----------|-------------------------------------|----------|----------|---------------------------------------------------------|----------|
| 15351    | Screw 4x8 for 11053                       | 1        | 15458    | Ring 164 5x2 - Oil Seal for 11053   | 19       | 15451    | Cast Iron Jacket Holder (Grub Screw Included) for 11053 | 38       |
| 15352    | Disc Locking ABS DA 80mm for 11053        | 2        | 15441    | Motor Cover - Front for 11053       | 20       | 15452    | Grub Screw for 11053                                    | 39       |
| 68910    | Aluminum Closing Disc 80mm for 11053      | 2        | 15459    | Washer for 11053                    | 21       | 15453    | Worm and Pin Aluminum for 11053                         | 40       |
| 15353    | Screw 5x30 for 11053                      | 3        | 15442    | Screw 6x20 for 11053                | 22       | 15454    | Worm Pin for 11053                                      | 41       |
| 15380    | Back Motor Cover for 11053                | 4        | AI213    | O-Ring 3037 for 11053               | 23       | 15455    | Ring for 11053                                          | 44       |
| 15381    | Bearing 6203 ZZ for 11053                 | 5        | 15444    | Brass Oil Cap for 11053             | 24       | 15456    | Pan Dim 300 x 220 for 11053                             | 45       |
| 15414    | Ring for 11053                            | 6        | 15448    | Seal for 11053 for 11053            | 25       | 18658    | Base for 11053                                          | 46       |
| 15415    | Fan for 11053                             | 7        | 15393    | Gear for 11053                      | 26       | 70181    | Washer 8x16x1.5 (4 pcs.) for 11053                      | 47       |
| AI211    | Shaft with Rotor V.230 / 50 Hz. for 11053 | 8        | 15381    | Bearing 6203 ZZ for 11053           | 27       | 15410    | Screw 8x22 for 11053                                    | 48       |
| 20178    | Stator for 11053                          | 9        | 15394    | Seeger of 40 for 11053              | 28       | 17701    | Switch for 11053                                        | 49       |
| AI209    | Long Banded Motor Housing for 11053       | 10       | 15389    | Bearing 6203 2RS for 11053          | 29       | 19378    | Bipolar Switch for 11053                                | 49       |
| AD423    | Wheat 8x6 for 11053                       | 11       | 15387    | Oil Seal 40x25x7 for 11053          | 30       | AI214    | Base Closing Bottom for 11053                           | 50       |
| AI212    | Base Gasket for 11053                     | 12       | 46421    | Key 4x4x12mm for Big Gear for 11053 | 31       | 15412    | Screw 4 8x12 for 11053                                  | 51       |
| 15387    | Oil Seal 40x25x7 for 11053                | 13       | 15395    | Transmission Pin for 11053          | 32       | 79564    | Rubber Feet with Screw for 11053                        | 52       |
| 15447    | Gear Pin for 11053                        | 14       | 15450    | Jacket Holder for 11053             | 33       | 19379    | Capacitor UF20 for 11053                                | 53       |
| 15389    | Bearing 6203 2RS for 11053                | 15       | 15401    | Knob for 11053                      | 34       | 15407    | Grand PG11 for 11053                                    | 54       |
| 15392    | Double Gear for 11053                     | 16       | 15443    | Screw 6x18 for 11053                | 35       | 15351    | Screw 4x8 for 11053                                     | 55       |
| 15390    | Propeller Gear for 11053                  | 17       | 42929    | Hopper for 11053                    | 36       | 70168    | Cable with Plug Mod.Schuko V.230 for 11053              | 56       |
| 15391    | Key 3x3x15mm for 11053                    | 18       | 46295    | Plunger for 11053                   | 37       |          |                                                         |          |

# Parts Breakdown

**Model MG-IT-0032-C 39714**

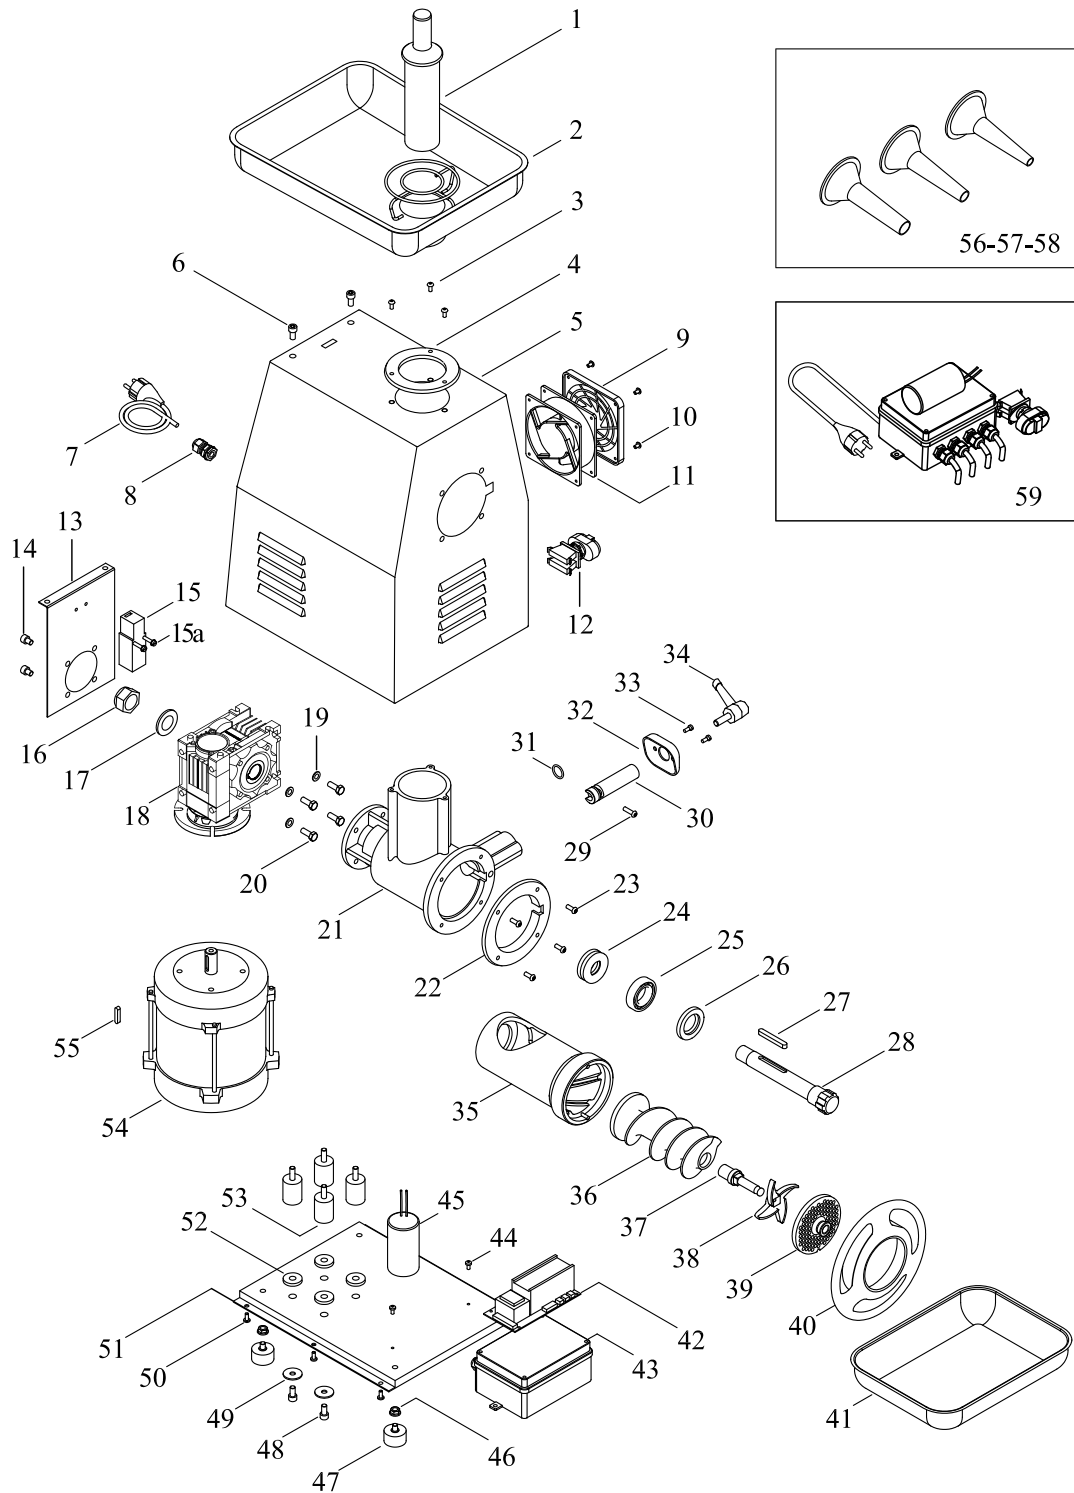


# Parts Breakdown

## Model MG-IT-0032-C 39714


| Item No. | Description                                   | Position | Item No. | Description                                                       | Position | Item No. | Description                                | Position |
|----------|-----------------------------------------------|----------|----------|-------------------------------------------------------------------|----------|----------|--------------------------------------------|----------|
| 70162    | Pestle for 39714                              | 1        | 15363    | Screw 8x20 for 39714                                              | 20       | 70202    | Stainless Steel Wheel Round for 39714      | 40       |
| 70163    | Hopper D76 Big Prot.Mano + Fork for 39714     | 2        | 70183    | Internal Aluminum for 39714                                       | 21       | 15456    | Pan Dim 300x220 for 39714                  | 41       |
| 70164    | Steel Screw 5x12 (3 pcs.) for 39714           | 3        | 70184    | Flange Front Inox for 39714                                       | 22       | 70204    | Circuit Board with Reversal for 39714      | 42       |
| 70165    | Upper Flange Inox D76 for 39714               | 4        | 70185    | Steel Screw 6x16 (4 pcs.) for 39714                               | 23       | 70205    | Electrical Box + PG for 39714              | 43       |
| 70166    | Casing Steel for 39714                        | 5        | 70186    | Thrust Bearing 51305 for 39714                                    | 24       | 70206    | Tapping Screw 4.6x10 (2 pcs.) for 39714    | 44       |
| 70167    | Steel Screw 8x16 (2 pcs.) for 39714           | 6        | 70187    | Bearing 6006 2RS for 39714                                        | 25       | 70207    | Condenser 55 uF for 39714                  | 45       |
| 70168    | Cable with Plug Mod.Schuko V.230 for 39714    | 7        | 70188    | Oil Seal 30x55x7 for 39714                                        | 26       | 70208    | Self-Locking Nut M8 (4 pcs.) for 39714     | 46       |
| 15407    | Gland PG11 for 39714                          | 8        | 70189    | Key 6x6x30 for 39714                                              | 27       | 70209    | Foot Rubber Thread (4 pcs.) for 39714      | 47       |
| 70170    | Filter only Three Phase for 39714             | 9        | 70190    | Pin Driver Helix for 39714                                        | 28       | 70210    | Screw M6x20 (4 pcs.) for 39714             | 48       |
| 70171    | 4x45 Screw for Fan (4 pcs.) for 39714         | 10       | 70191    | Wheat Inox 6x20 for 39714                                         | 29       | 70211    | Washer 6x18x1.5 (4 pcs.) for 39714         | 49       |
| 70172    | Fan 230V only Single Phase for 39714          | 11       | 70192    | Mouth Stopping Pin for 39714                                      | 30       | 70212    | Screw 5x12 (6 pcs.) for 39714              | 50       |
| 70173    | Switch Triple 24V. Reverse for 39714          | 12       | 70193    | Ring 3075 for 39714                                               | 31       | 70213    | Fund Closure for 39714                     | 51       |
| 70174    | Bracket Door Micro for 39714                  | 13       | 70194    | Stud Stainless Steel Lever for 39714                              | 32       | 70214    | Rubber Anti for 39714                      | 52       |
| 70175    | Screw 8x12 (4 pcs.) for 39714                 | 14       | 70195    | Steel Screw 5x12 (2 pcs.) for 39714                               | 33       | 70215    | Vibration Motor for 39714                  | 53       |
| 70176    | Micro Switch for 39714                        | 15       | 70196    | Lever Stop for Mouth Reels for 39714                              | 34       | 70216    | Complete Motor V.230 / 60Hz Hp.3 for 39714 | 54       |
| 70177    | Screw + Nut for Micro 5x35 (2 pcs.) for 39714 | 15a      | 70197    | Mouth Meat Inox for 39714                                         | 35       | 70189    | Key 6x6x30 for 39714                       | 55       |
| 70178    | Self-Locking Nut M24x1.5 for 39714            | 16       | 70198    | Stainless Steel Worm and Pin for 39714                            | 36       | 70218    | Funnel Mod.32 Hole 15 for 39714            | 56       |
| 70179    | Washer 25x40x2 for 39714                      | 17       | 70199    | Pin Knifeholder for 39714                                         | 37       | 70219    | Funnel Mod.32 Hole 20 for 39714            | 57       |
| 70180    | Gear for 39714                                | 18       | 11079    | ES Machine Knife Stainless Steel #32 for 39714                    | 38       | 70220    | Funnel Mod.32 Hole 25 for 39714            | 58       |
| 70181    | Washer 8x16x1.5 (4 pcs.) for 39714            | 19       | 43565    | ES #32 HS Plate with HUB 3/8 10mm Three Notches / Round for 39714 | 39       | 70221    | Kit Electrical V.230 / 50-60Hz for 39714   | 59       |

# Electrical Schematics

## Model MG-IT-0012-C 11051

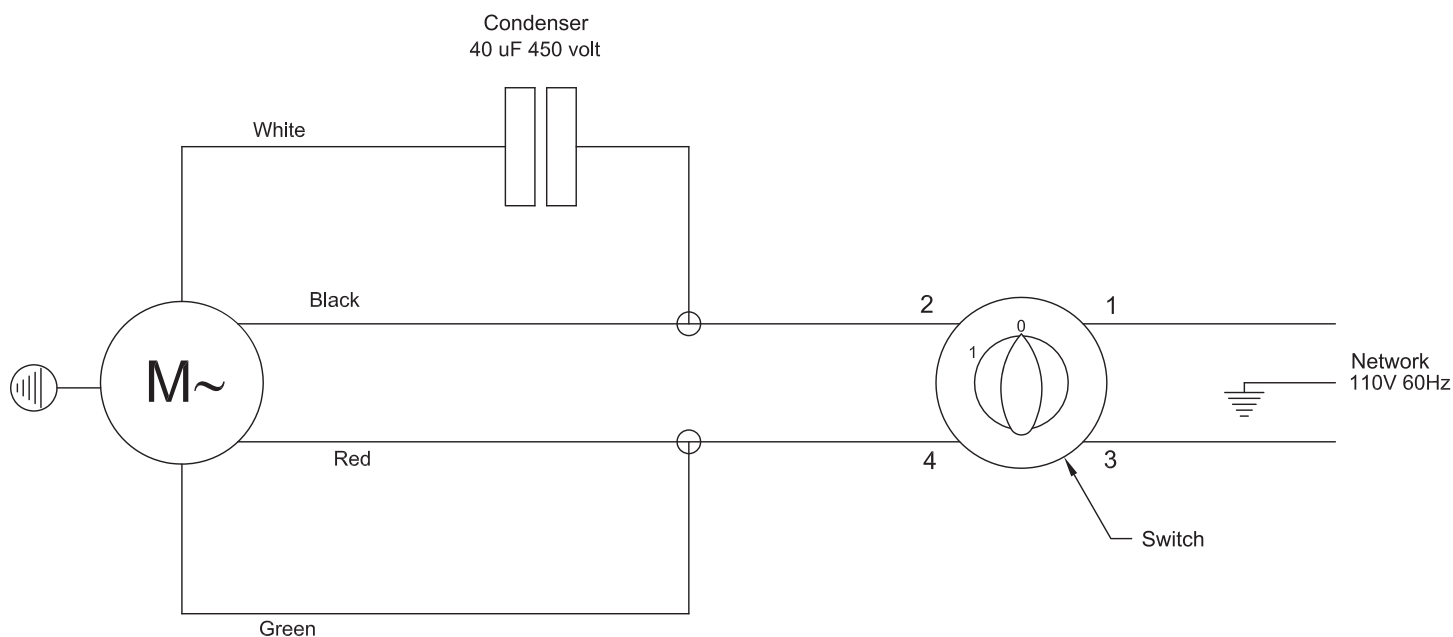


## Model MG-IT-0022-C 11053

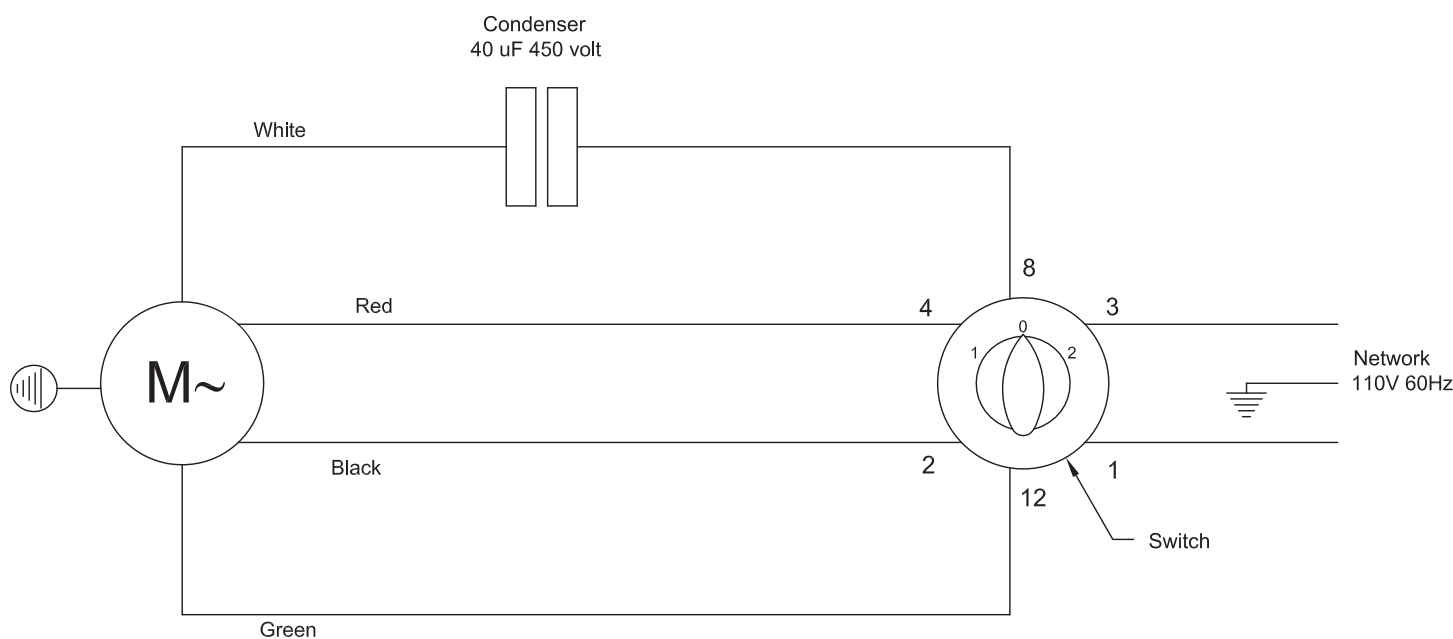

# Electrical Schematics

**Model MG-IT-0032-C** 39714

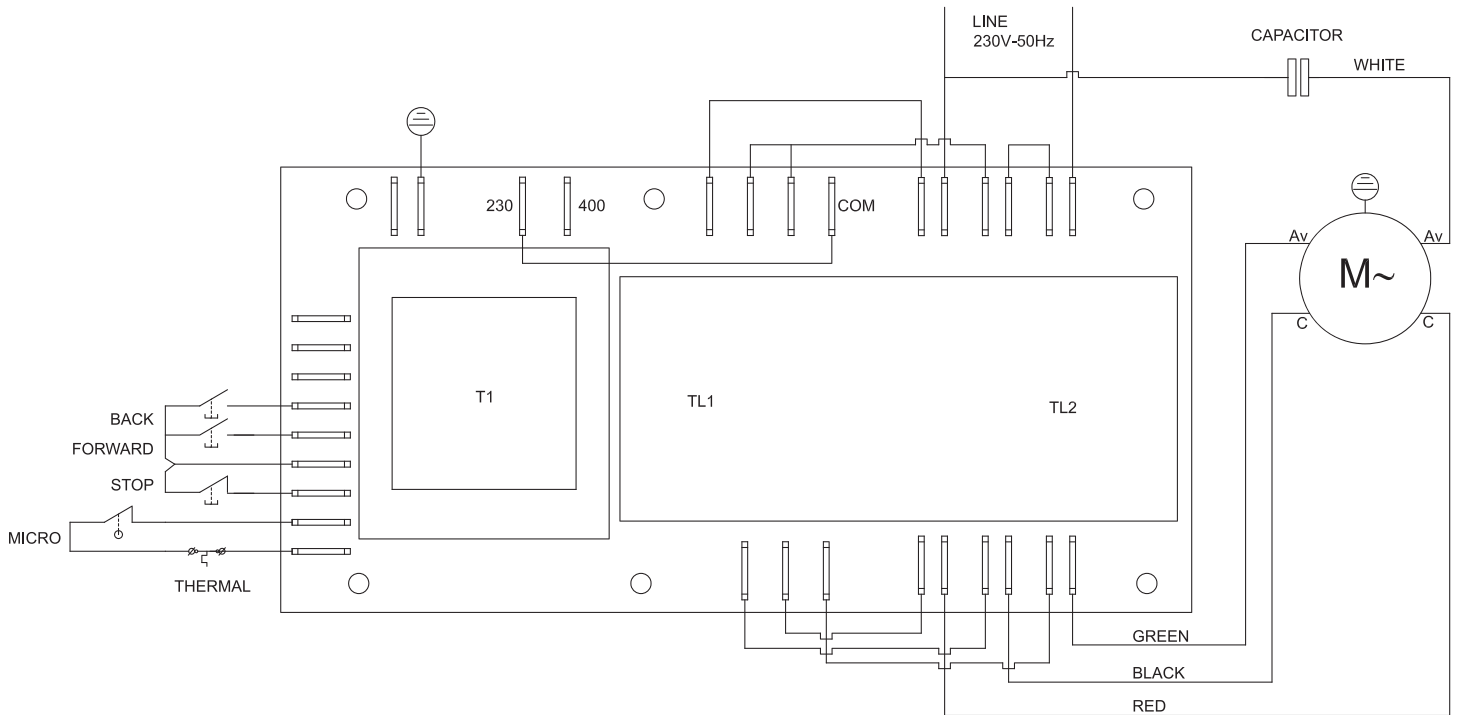



# Warranty Registration

Thank you for purchasing an Omcan product. To register your warranty for this product, complete the information below, tear off the card at the perforation and then send to the address specified below. You can also register online by visiting:

Merci d'avoir acheté un produit Omcan. Pour enregistrer votre garantie pour ce produit, complétez les informations ci-dessous, détachez la carte au niveau de la perforation, puis l'envoyer à l'adresse spécifiée ci-dessous. Vous pouvez également vous inscrire en ligne en visitant:

Gracias por comprar un producto Omcan usted. Para registrar su garantía para este producto, complete la información a continuación, cortar la tarjeta en la perforación y luego enviarlo a la dirección indicada a continuación. También puede registrarse en línea en:

***<https://omcan.com/warranty-registration/>***

**For mailing in Canada**

**Pour postale au Canada**

**Por correo en Canadá**

**OMCAN**

**PRODUCT WARRANTY REGISTRATION**

**3115 Pepper Mill Court,**

**Mississauga, Ontario**

**Canada, L5L 4X5**

**For mailing in the US**

**Pour diffusion aux États-Unis**

**Por correo en los EE.UU.**

**OMCAN**

**PRODUCT WARRANTY REGISTRATION**

**4450 Witmer Industrial Estates, Unit 4,**

**Niagara Falls, New York**

**USA, 14305**

***or email to: [service@omcan.com](mailto:service@omcan.com)***



## Purchaser's Information

Name: \_\_\_\_\_

Address: \_\_\_\_\_

City: \_\_\_\_\_ Province or State: \_\_\_\_\_ Postal or Zip: \_\_\_\_\_

Country: \_\_\_\_\_

Dealer from which Purchased: \_\_\_\_\_

Dealer City: \_\_\_\_\_ Dealer Province or State: \_\_\_\_\_

Invoice: \_\_\_\_\_

Company Name: \_\_\_\_\_

Telephone: \_\_\_\_\_

Email Address: \_\_\_\_\_

Type of Company:

☐ Restaurant ☐ Bakery ☐ Deli

☐ Butcher ☐ Supermarket ☐ Caterer

☐ Institution (*specify*): \_\_\_\_\_

☐ Other (*specify*): \_\_\_\_\_

Model Name: \_\_\_\_\_ Model Number: \_\_\_\_\_ Serial Number: \_\_\_\_\_

Machine Description: \_\_\_\_\_

Date of Purchase (MM/DD/YYYY): \_\_\_\_\_ Date of Installation (MM/DD/YYYY): \_\_\_\_\_

Would you like to extend the warranty? ☐ Yes ☐ No

**Thank you for choosing Omcan | Merci d'avoir choisi Omcan | Gracias por elegir Omcan**



Since 1951 Omcan has grown to become a leading distributor of equipment and supplies to the North American food service industry. Our success over these many years can be attributed to our commitment to strengthen and develop new and existing relationships with our valued customers and manufacturers. Today with partners in North America, Europe, Asia and South America, we continually work to improve and grow the company. We strive to offer customers exceptional value through our qualified local sales and service representatives who provide convenient access to over 5,000 globally sourced products.

---

Depuis 1951 Omcan a grandi pour devenir un des “leaders” de la distribution des équipements et matériel pour l’industrie des services alimentaires en Amérique du Nord. Notre succès au cours de ces nombreuses années peut être attribué à notre engagement à renforcer et à développer de nouvelles et existantes relations avec nos clients et les fabricants de valeur. Aujourd’hui avec des partenaires en Amérique du Nord, Europe, Asie et Amérique du Sud, nous travaillons continuellement à améliorer et développer l’entreprise. Nous nous efforçons d’offrir à nos clients une valeur exceptionnelle grâce à nos ventes locales qualifiées et des représentants de service qui offrent un accès facile à plus de 5000 produits provenant du monde entier.

---

Desde 1951 Omcan ha crecido hasta convertirse en un líder en la distribución de equipos y suministros de alimentos en América del Norte industria de servicios. Nuestro éxito en estos años se puede atribuir a nuestro compromiso de fortalecer y desarrollar nuevas relaciones existentes con nuestros valiosos clientes y fabricantes. Hoy con socios de América del Norte, Europa, Asia y América del Sur, que trabajan continuamente para mejorar y crecer la empresa. Nos esforzamos por ofrecer a nuestros clientes valor excepcional a través de nuestro local de ventas y representantes de los servicios que proporcionan un fácil acceso a más de 5,000 productos con origen a nivel mundial.

